

The WOODWAY Path Home Model will give your home gym the same commercial quality you desire in a smaller package

Patented Slat-Belt® Transportation System

- Individual slats with vulcanized rubber surface
- Zero stretch and Zero slip toothed, wire-reinforced lateral belts
- Near frictionless precision ball bearing rail guide

Convenient User Console


- Multiple LED readouts monitoring speed, incline, distance, time, and heart rate
- CSAFE fitness communications compatible

Safety and Reliability

- Emergency stop magnet and safety lanyard
- Polar monitor circuitry – integrated heart rate monitoring
- Advanced SlatFlex® shock absorption
- Life expectancy of running surface 150,000 - 200,000 miles
- Extended warranty and factory renewal program



Dimensions

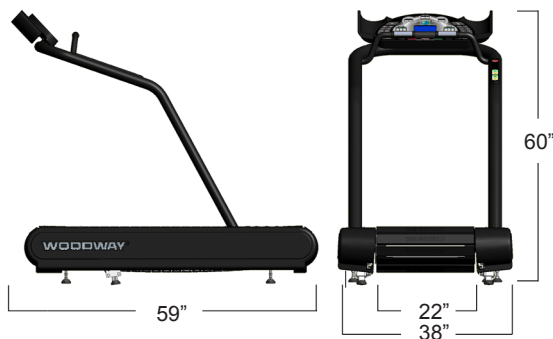

Physical Specifications

Belt Type	47 individual slats
Drive System	114 precision ball bearings with 12 guide rollers (4 mm lateral tolerance)
Running Surface	Vulcanized rubber (38-43 shore hardness)
Drive Motor	2 hp continuous (5 hp peak) brushless servo
Unit Weight	370 lb. (shipping weight 455 lb.)
Power Supply	110 V power supply (dedicated circuit and NEMA 5-20R outlet receptacle required)


Performance Specifications

User Weight Capacity	Running 500 lb. Walking 800 lb. (4 mph max)
Running Surface Area	22" X 52"
Speed Range	0 - 11 mph zero start 0.1 mph increments
Elevation Range	0 - 15%
Warranty	15 year frame 7 year wear warranty 5 year drive and motor 3 year all components 3 year labor

Customize a Path to Meet Your Particular Needs

Additional Options:

- Medical Package (hospital grade circuitry, reverse and 4 year parts warranty)
- Polar monitor chest strap
- RS-232 serial port interface (includes MedPro software)
- 220 V or 208 V – 50/60 Hz power supply (NEMA 6-20R)
- 0 – 15 mph speed range
- 19" LCD TV (does not require separate power source)
- Reverse (0 – 5 mph)

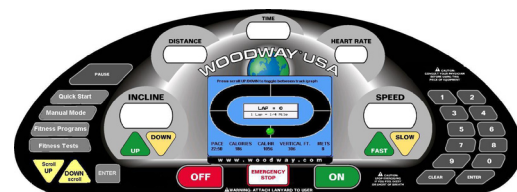

Personal Trainer Package Standard

- Menu driven color LCD screen (shown above)
- 10 pre programmed workouts
- Ability to create custom user workouts (up to 99)
- Fitness testing (Pre loaded U.S. Military, Medical and Fire Department protocol)
- Animated Readouts (speed, incline, distance, calories, time/pace heart rate and METs)