

ENDLESS POSSIBILITIES

BURN UP TO 30% MORE CALORIES - ZERO ELECTRICITY REQUIRED

The Curve Trainer is a completely manual treadmill allowing a user to accelerate and decelerate at their own desired pace without the need to push a button. The curved design of the treadmill requires a user to practice proper gait and running mechanics encouraging better posture while activating posterior chain muscles.

With unlimited mobility the Curve Trainer allows the user to take full control of their workout allowing for easy transitions between various speeds and tempo runs. Not in the mood to run? The Curve Trainer also makes for a great walking platform while still providing all the direct benefits of running. Burn up to 30% more calories on this completely self-powered machine delivering an unparalleled workout providing leading edge technology including Responsive Programming, workouts based on user ability and effort, and Stride Lab, an advanced user performance dashboard.




Curve TR 10" Pro Smart Display, showing "Responsive Programming"

		CURVE TRAINER
USER INTERFACE	● Standard Feature	
	○ Optional Feature	
	10" Touchscreen	○
	Coded/Non-Coded Polar Heart Rate Pick-up	●
	USB Digital Speed Output	Call
	USB Digital Speed Output with Curve Pro Software (Curve 1.5)	Call
	RFID System	Call
	LED Display Board	●
	Running Surface Dimensions	17" W x 67" L (43 x 170 cm)
	User Weight Capacity	Run: 400 lb. / Walk: 800 lb. (4 mph max)
SPECIFICATIONS	Belt Type	60 Individual Slats
	Running Surface	3/8" thick shock absorbing cushion
	Drive System	112 Precision Ball Bearings with 12 Roller Guides (4 mm lateral tolerance)
	Unit Weight	350 lb. (Shipping Weight 440 lb.)
	Width	33" (84 cm)
	Length	73" (185 cm)
	Height	67" (170 cm)
	Self-propelled	●
	Reverse	NA
	Power Supply	Not Required for Standard Display 115 Vac 20 Amp Required for ProSmart
	Warranty	10 Year Frame & Belt 3 Year All Components 1 Year Labor

Treadmill specifications subject to change without written notice | Warranties outside the U.S. may vary - Please contact your dealer for details.

Treadmill specifications subject to change without written notice. Warranties outside the U.S. may vary - Please contact your dealer for details.

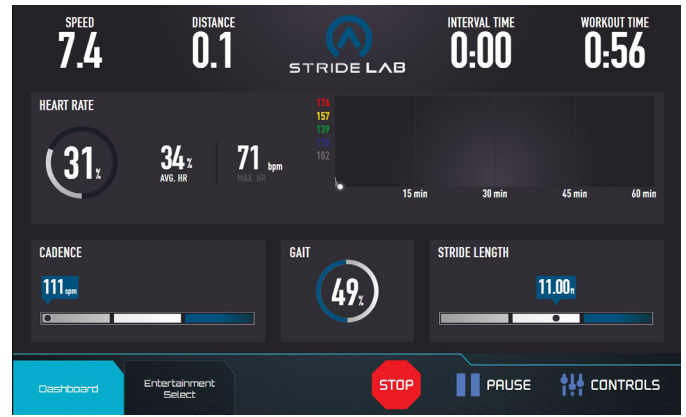

ProSmart StrideLab View



ProSmart Programs View

CURVE SERIES



CURVE

From beginners to serious athletes the Curve is the universal cardio solution. Users can workout at any speed with full control of the treadmill, making the Curve the ideal sport specific high intensity and small group training tool.



CURVE XL

Popular among Professional Sports teams and military training facilities the Curve XL features all the innovations and benefits of the standard Curve in an extra-large platform for the larger-lengthier athletes.



CURVE FTG

The Curve FTG is the newest addition to the Curve series. The Curve FTG has a braking system that allows for resistance training. Designed to provide proper biomechanic positioning and technique the FTG ensures longer, better, and overall more enjoyable, workouts than our competitors. Still human powered and incredibly green, the Curve FTG does require basic 110v outlet for the braking system.

FOR ADDITIONAL INFORMATION ABOUT THE FOLLOWING PRODUCT VISIT WWW.WOODWAY.COM OR CALL 800.WOODWAY TO TALK TO A REPRESENTATIVE.